

USER GUIDE




CHARACTERISTICS

- 7 day programming
- 2 Channels A and B
- 9 Built-in programs
- 1 user program per channel
- Program graphic display
- Automatic or Manual operation
- Keypad lock function (child safety)
- Hours and parameters are saved in case of power outage.

DISPLAY

- 1 : Operating mode menu
- 2 : Days of the week
- 3 : Time
- 4 : Program graphic
- 5 : Channel A or B

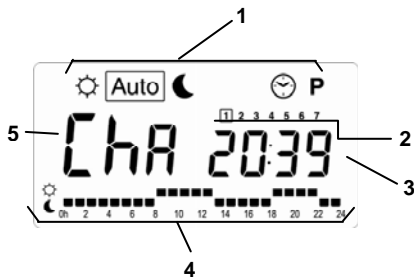

MODE DESCRIPTION

Use the keys & in order to change the mode in the operating mode menu.

Set CLOCK Menu

Use this menu to adjust the Timer clock to the actual time.

Use / to adjust the minutes Press Press

Use / to adjust the hours Press Press

Them use / to adjust the day Press

Manual REDUCED operating mode

Force reduced temperature operation indefinitely on the 2 Channel.

Manual COMFORT operating mode

Force comfort temperature operation indefinitely on the 2 Channels.

AUTOMATIC operating mode


The Timer follows automatically the selected program according to the actual time.

IMPORTANT:

In order to control , , your thermostats with the **TIMER**, please put your thermostat in position.

P PROGRAM menu :

By pressing or keys select the channel **ChA** or **ChB** to program, then validate with key.

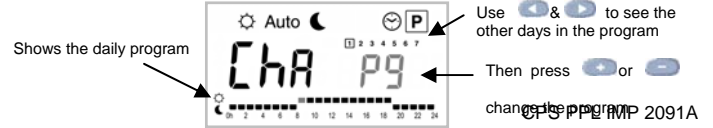

If you select a built-in program **P1** to **P9** and press this program will be followed in **Auto** mode.

Built-in programs description

- P1:** Morning, Evening & Week-end
- P2:** Morning, Midday, Evening & Week-end
- P3:** Day & Week-end
- P4:** Evening & Week-end
- P5:** Morning, Evening (bathroom)
- P6:** Morning, Afternoon & Week-end
- P7:** 7h - 19h (Office)
- P8:** 8h - 19h Saturday (Shop)
- P9:** Week-end (Secondary House)

You can also select a user program **U1** for Channel **A** and **U2** for Channel **B**.

USER PROGRAM EDITION

The key sets temperature at the current blinking program hour. The key sets temperature at the current blinking program hour.

Use & keys to slide the blinking cursor position in the day and modify or correct the program easily.

When the displayed day is correct press to save it and then you jump to the following day. When you press on day 7 you return to the top menu.

Now once automatic operating mode **Auto** is selected, the Timer will look for the Channels **A** and **B** the desired programs.

SPECIAL FUNCTIONS

KEYPAD LOCK Function :

Function to prevent any modifications or changes of the parameters.

In , **Auto**, operating modes you should maintain the key pressed and press simultaneously on the or key to lock (**Loc code**) or unlock (**Un Loc**) the keypad.

TECHNICAL CHARACTERISTICS

Operating voltage	24VAC +/- 10%
Operating temperature	32°F – 122 °F
Circuit protection	IP30

DIMENSIONS



MASTER 6 ZONES or 4 ZONES

TIMER

