 


fluid™



Push Type Easy Clean Drain Installation Instructions

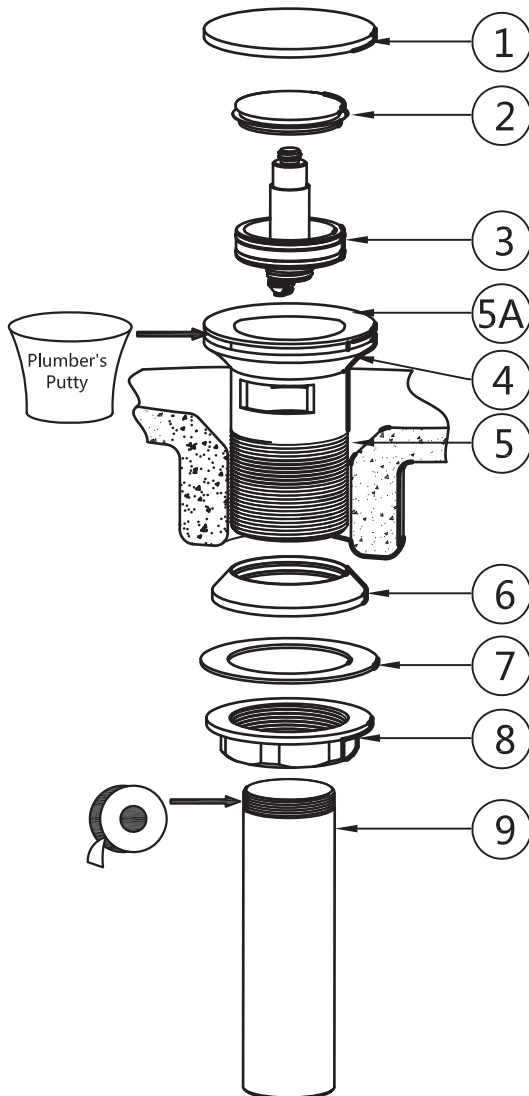

Model# FA726

Need Help?

For additional assistance
Toll Free: 1 800 460 7019
Fax: 1 604 430 5050

1. Remove plastic cover (#1).
2. Unscrew tail pipe (#9) from drain body (#5).
3. Remove locknut (#8), friction washer (#7) and black rubber washer (#6) from drain body (#5).
4. With silicon washer (#4) in place, insert drain body (#5) through drain hole from above. Ensure silicon washer (#4) securely seats inside drain hole.
Note: for basin with a shallow drain hole, remove silicon washer (#4) and place a bead of plumber's putty around the underside of flange (#5A) prior to inserting drain body (#5) through drain hole.
5. Re-install black rubber washer (#6), friction washer (#7) and locknut (#8) in order from under the sink.
6. Tighten locknut (#8) until black rubber washer (#6) securely seats inside drain hole. Tighten locknut (#8) with a wrench.
7. Wrap threads of tail pipe (#9) with Teflon tape, then screw tail pipe (#9) to drain body (#5).

Operation Instructions

- Push to raise stopper(#2) to open the drain.
- Push to lower stopper(#2) to close the drain.

Maintenance Instructions

The easy clean basket feature of this drain ensures that dirt and hair are trapped in the removeable basket, preventing clogs further down the drain line. Frequent cleaning of the basket will keep the drain opening clear and ensure a longer service life for this products. To clean basket:

1. Pull stopper (#2) straight up to remove basket (#3).
2. Remove any dirt or hair that has accumulated in basket (#3).
3. Rinse basket under clean water and replace basket (#3) and stopper (#2).