

Robertshaw®

RS9110

Operation Manual

Table of Contents Page


| | |
|----------------------------|-------|
| Table of Contents | 1 |
| Thermostat Operation | 2-3 |
| Thermostat Quick Reference | 4-7 |
| Programming | 8-10 |
| Installer Setup Menu | 11-15 |
| Terminal Designations | 16 |



Caution

DO NOT SWITCH SYSTEM TO COOL IF THE TEMPERATURE IS BELOW 50°F (10°C). THIS CAN DAMAGE THE AIR CONDITIONING SYSTEM AND CAUSE PERSONAL INJURY.

THERMOSTAT OPERATION

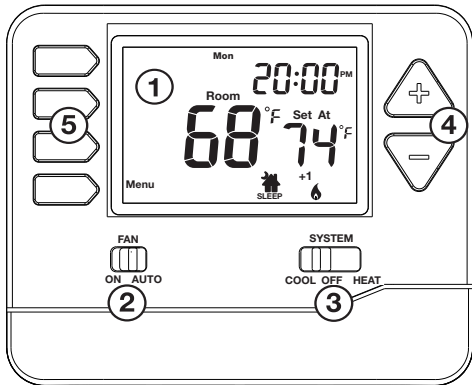

1 LCD Screen

2 Fan Switch

3 System Switch

4 Temperature Set-Point Buttons

5 User Buttons

TERMOSTAT OPERATION

1 LCD Screen

See page 4 for detailed information.

2 Fan Switch

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is running.

3 System Switch

Select **HEAT** or **COOL** for your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode.

Selecting **OFF** turns both heating and cooling off.

4 Temperature Set-Point Buttons

Press the  or  to select the desired temperature.


5 User Buttons

Use these buttons to set up programming options.

THERMOSTAT QUICK REFERENCE

Days of the week and time.

Displays the user selected set-point temperature.

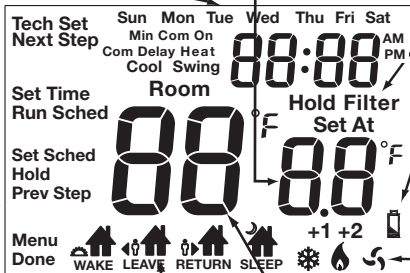

Hold: Is displayed when thermostat program is overridden.

Low Battery Indicator: Replace batteries when indicator is shown.

System Operation Indicators:

The ❄️, 🔥, or 🌀 icon will display when the COOL, HEAT, or 🌀 (fan) is on.

NOTE: If these icons are flashing, there is a 5-minute delay for compressor protection.

Button Options

Programmable Time Periods:


This thermostat has 4 programmable time periods per day.

Indicates the current room temperature.


THERMOSTAT QUICK REFERENCE



Caution:


When the battery icon  appears, replace the alkaline AAA batteries immediately to avoid damage to your HVAC system. Freezing or overheating could occur.

Battery Door Information

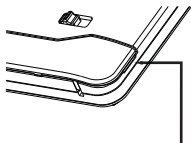



Press the lower portion of the thermostat to open the easy access battery door.

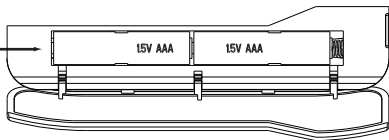

Install two AAA Alkaline batteries into battery compartment. Be sure to match positive (+) ends of batteries with positive (+) battery terminals in the battery compartment.



THERMOSTAT QUICK REFERENCE

Temperature Adjustment (if Using a Program Schedule)

Temporary Adjustment: You may temporarily change the desired temperature set-point by pressing either  or . The temperature will remain at this set-point until the next programmed **WAKE, LEAVE, RETURN, or SLEEP** event. The program schedule will then resume.

Program Schedule Hold: The thermostat will display **HOLD** and **RUN SCHED** on the left of the screen when you press either  or . You may hold the temperature at a fixed temperature set-point and override the program schedule by pressing **HOLD**. The thermostat will display **HOLD** below the temperature set-point to notify you that the program schedule hold is in effect.

To Return to Programming: Press **RUN SCHED** to return to the program schedule.


THERMOSTAT QUICK REFERENCE

Filter Change Reminder

The thermostat can be configured to remind you when the air filter needs to be changed. The filter change reminder can be adjusted to up to 2000 hours in 50 hour increments.





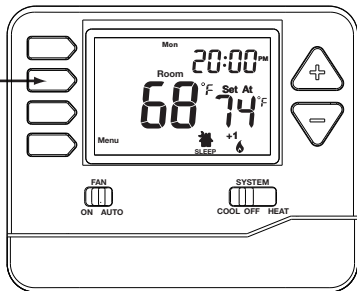

If the installer configured the thermostat to issue this reminder, **FILTER** will be displayed when it is time to change the air filter. When **FILTER** is displayed, you should change the air filter and reset the Filter Change Reminder by holding down the second button from the top left side of the thermostat for 3 seconds.

Hold down button for
3 seconds to reset
filter reminder.



PROGRAMMING





Set Time of Day and Day of Week

1. Press the **MENU** button.
2. Press **SET TIME**.
3. Day of the week will be flashing. Use  or  to select the current day of the week.
4. Press **NEXT STEP**.
5. The current hour will be flashing. Use  or  to select the current hour. Note the correct a.m. or p.m. indicator is selected.
6. Press **NEXT STEP**.
7. The minutes will be flashing. Use  or  to select the current minutes.
8. Press **DONE** when completed.

Custom Programming

This thermostat can be configured to have 7 Day or 5+1+1 programming. If 7 Day is selected, all seven days will need to be programmed individually. If 5+1+1 programming is selected, Monday–Friday will be programmed together and Saturday and Sunday will need to be programmed individually. There are four time periods for each day (**WAKE, LEAVE, RETURN, SLEEP**).



Follow the steps below to customize your program schedule:

1. Select **HEAT** or **COOL**. Note: Heat and cool need to be programmed separately.
2. Press **MENU** (If menu does not appear first, press **RUN SCHED**).
3. Press **SET SCHED**. Note: Monday–Friday (or Monday if in 7 Day mode) will be displayed and the **WAKE** icon is shown.
4. Time will be flashing. Use  or  to make your time selection for the **WAKE** time period for Monday–Friday (or Monday if in 7 Day mode).
5. Press **NEXT STEP**.
6. The set-point temperature will be flashing. Use  or  to make your set-point selection for the **WAKE** time period for Monday–Friday (or Monday if in 7 Day mode).

PROGRAMMING

Custom Programming

7. Press **NEXT STEP**.
8. Repeat steps 4 through 7 for the **LEAVE** time period, for the **RETURN** time period, and for the **SLEEP** time period for Monday–Friday (or Monday if in 7 Day mode).
9. Repeat steps 4 through 8 for the Saturday **WAKE, LEAVE, RETURN,** and **SLEEP** time periods, and then again for the Sunday **WAKE, LEAVE, RETURN,** and **SLEEP** time periods for the 5+1+1 program schedule, and for each day for the 7-day program schedule.

1. Press **MENU**.
2. Press and hold **TECH SET** for 3 seconds.
3. Configure the installer options as desired using the table on page 12.
4. Use  OR  to change settings and the **NEW STEP** or **PREV STEP** to move from one option to another.

Note: Only press **DONE** when you want to exit the Installer Setup Options.



INSTALLER SETUP MENU



| Settings | | Display | Adjustment Options | Default |
|------------------------------|--|-------------------------------------|--|---------|
| Filter Change Reminder | This setting will flash FILT in the display after the elapsed run time to remind the user to change the filter. The OFF setting will disable this feature. | Next step OFF FL 5E Prev step | The filter change reminder can be adjusted from OFF to 2000 hours in 50 hour increments. Press the second button from the top left side of the thermostat to display the current filter elapsed runtime. | OFF |
| Room Temperature Calibration | This setting allows the installer to change the calibration of the room temperature display so that, for example, the thermostat would read 72°F instead of 70°F. | Next step [AL 0°F Prev step | The room temperature display can be adjusted to read up to 3° above or below the factory calibrated temperature. | 0 |
| Minimum Compressor On-Time | The installer can select the minimum run time for the compressor to help protect the compressor from short-cycling. | Next step OFF AN ON Prev step | The minimum compressor run time can be adjusted from OFF to 3, 4, or 5 minutes. If 3, 4, or 5 is selected, the compressor will run for at least the selected time before turning off (although the fan may continue to run for a short time). | OFF |

INSTALLER SETUP MENU

| Settings | Display | Adjustment Options | Default |
|------------------------------|--|---|---------|
| Compressor Short Cycle Delay | Next step 0N 00 OF Prev step | The compressor short cycle delay setting can be removed by selecting OFF . | ON |
| Cooling Differential | Next step dF 00 0.5 °F Prev step | The cooling differential setting is adjustable from 0.2°F to 2°F. | 0.5 |
| Heating Differential | Next step dF HE 0.4 °F Prev step | The heating differential setting is adjustable from 0.2°F to 2°F. | 0.4 |

INSTALLER SETUP MENU

| Settings | | Display | Adjustment Options | Default |
|---------------------|--|---------------------------------|--|---------|
| For C | Select F for Fahrenheit temperature display or select C for Celsius display. | Next step 82 °F Prev step | F for Fahrenheit C for Celsius | F |
| 12 or 24 Hour Clock | Select a 12 or 24 hour clock setting. | Next step 24H Prev step | Use  and  to select 12 or 24 hour clock. | 12 |
| Fan Operation | Select GAS or ELEC depending on the type of furnace. | Next step GAS Prev step | GAS - GS or ELEC -EL | GAS |

| Settings | Display | Adjustment Options | Default |
|---|--|---|------------------|
| <p>Program Options</p> <p>This thermostat can be configured to have 7 Day, 5+1+1 programming or be non-programmable.</p> <p>If 7 Day is selected, in Set Time all seven days will need to be programmed individually.</p> <p>If 5+1+1 programming is selected, in Set Time Monday–Friday will be programmed together and Saturday and Sunday will need to be programmed individually.</p> <p>If 0d is selected, the thermostat becomes non-programmable.</p> | <p>Next step Pr 00</p> <p>5d</p> <p>Prev step</p> | <p>Use  and  to select 7d for 7 Day, 5d for 5+1+1, or 0d for non-programmable.</p> | <p>5d</p> |


TERMINAL DESIGNATIONS

| | |
|----------|------------------------------------|
| RH | 24VAC Heating |
| RC | 24VAC Cooling |
| C..... | Common 24VAC (system power supply) |
| W..... | HEAT |
| Y..... | COOL |
| G..... | FAN |
| B..... | REV VALVE HEAT |
| O..... | Cooling Activated Reversing Valve |



Customer Service +1.800.304.6563
Technical Service +1.800.445.8299
HVACCustomerService@robertshaw.com
www.robertshaw.com • 352-00311-001 Rev. B

© 2021 Robertshaw Controls Company.
Robertshaw® is a trademark of Robertshaw Controls Company.

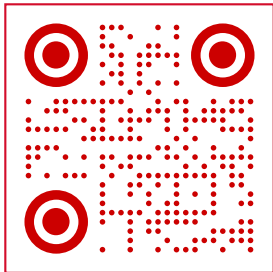

6 Year
Limited
Warranty

Use Phone
to Scan for
Warranty Info